


**(8) List of spare parts**

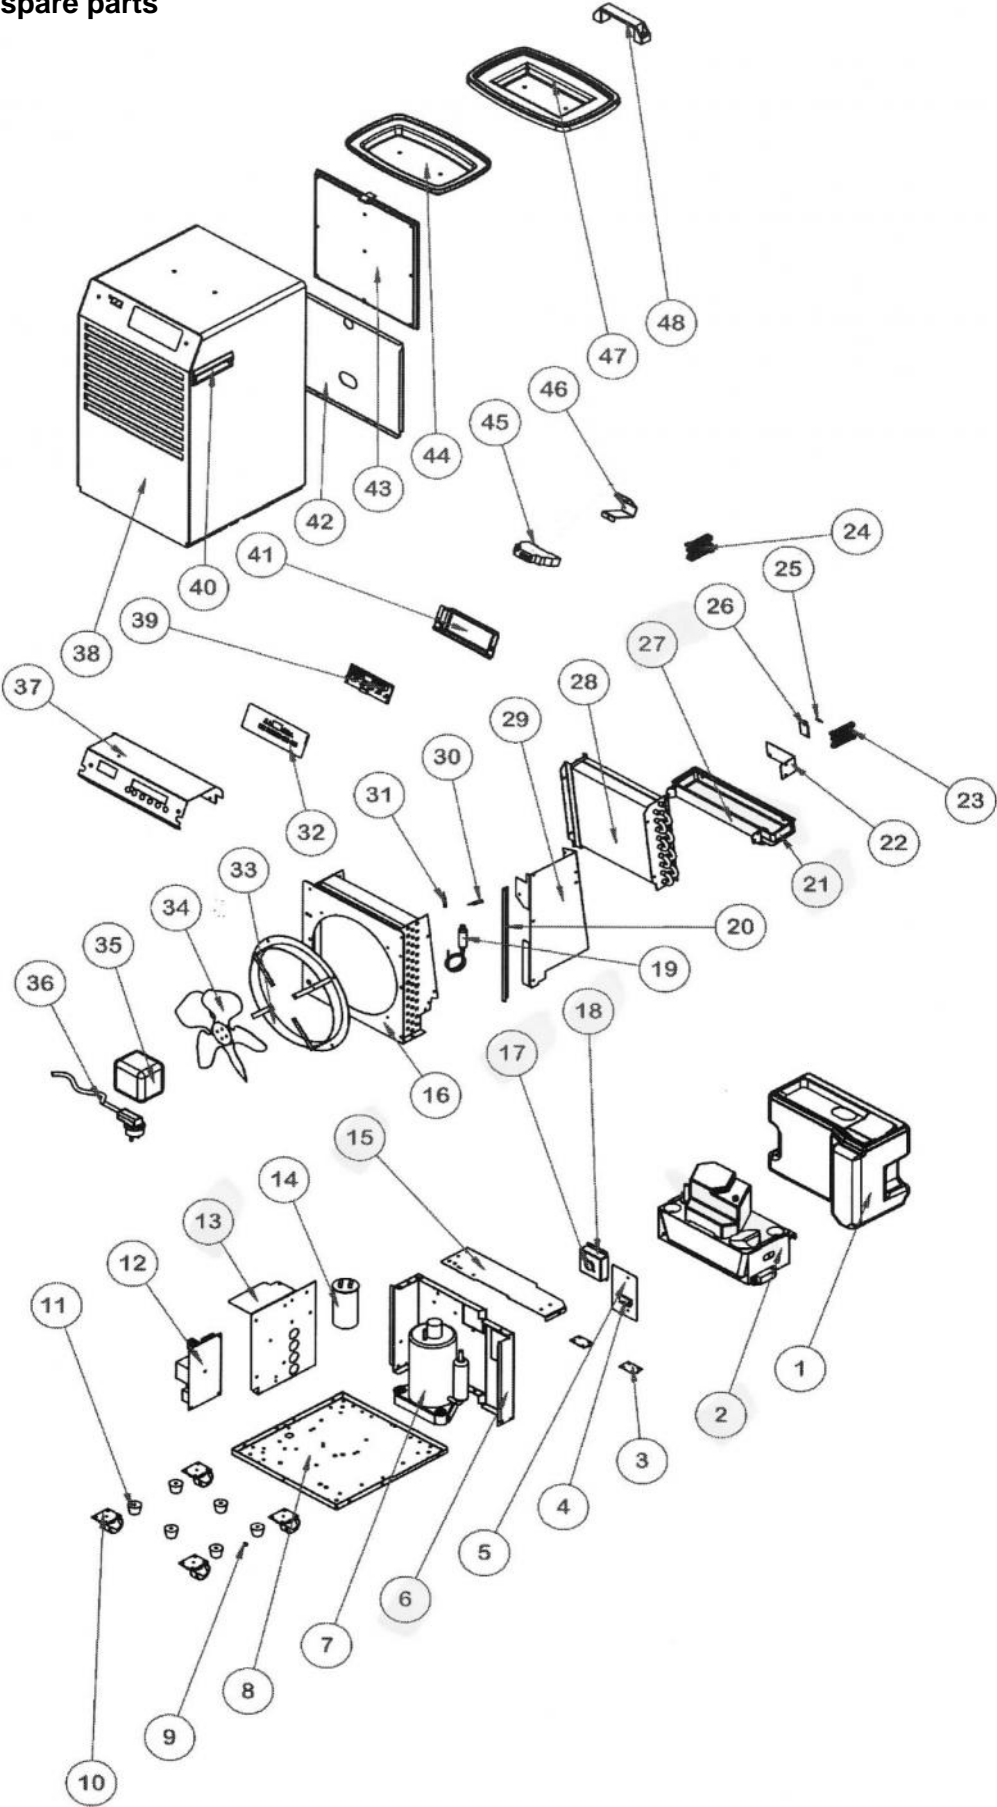

## List of spare parts

Item	HEYLO Art. No.	Description
1	DT750023	Tank
2	1110554	Condensate pump (optional)
3	DT750009	Door hinge
4	DT750011	Tank sensor
6	DT750027	Pass partition plate
7	DT750013	Compressor
10	DT750008	Wheel
11	DT750010	Rubber foot
12	DT750005	Control module
13	DT750028	Holder PCB
14	DT750007	Condenser compressor 10 $\mu$ F
15	DT750029	Spacer plate - condensate tub
16	DT750017	Condenser
17	DT750030	6 pin pump connection
18	DT750031	Holder pump connection
21	DT750032	Condensate tub
23	DT750025	Connection cable set display & moisture sensor
24	DT750025	Connection cable set display & moisture sensor
26	DT750006	Humidity sensor
27	DT750033	Holder condensate tub
28	DT750016	Vaporiser
30	DT750015	Temperature sensor
31	DT750015	Temperature sensor
32	DT750018	Display protection
34	DT750001	Fan wheel
35	DT750012	Fan motor
36	DT750024	Connecting cable 3 m
38	DT750019	Housing
39	DT750004	Display module
40	DT750014	Side handle
42	DT750020	Tank door
43	DT550026	Air filter
44	DT750021	Cable spool - lower part
45	DT750002	Energy meter
47	DT750022	Cable spool - upper part
48	DT750003	Upper handle

Ask your local dealer for spare parts or get in touch with HEYLO service department.